


# ANSER U2 STANDARD

EASY OPERATION



[shop.inkjetinc.com](http://shop.inkjetinc.com)

# POCKET SIZED REMOTE KEYPAD

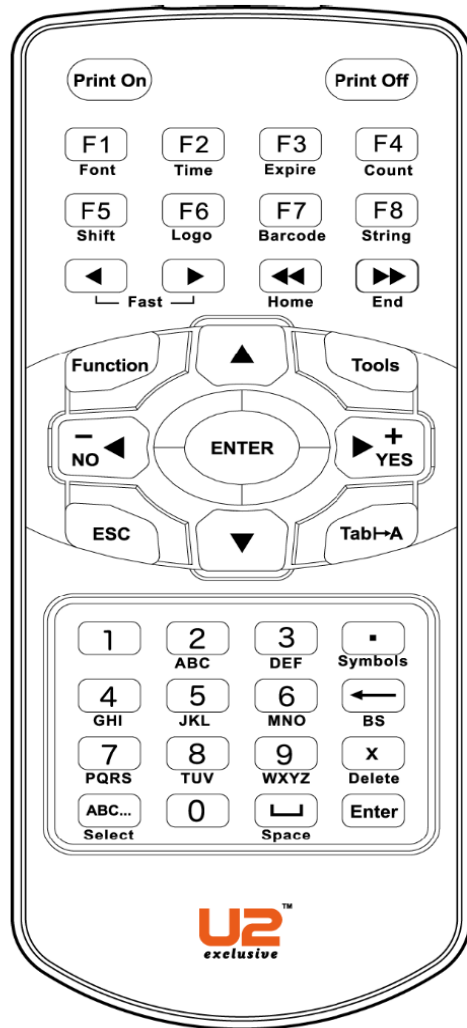

*These slides are meant for the U2 STANDARD*

The U2 series of printers has been upgraded!


While the U2 Standard is still in the market, they are not currently being manufactured.

The series is now offered in the following configurations:


- **U2 Smart** (½" print)
- **U2 SmartOne** (1" print)
- **U2 Pro-S** – Solvent based meant for printing on non-porous materials.

All of these can be purchased online at <https://shop.inkjetinc.com>

# EASY OPERATION MENU TREE (1)

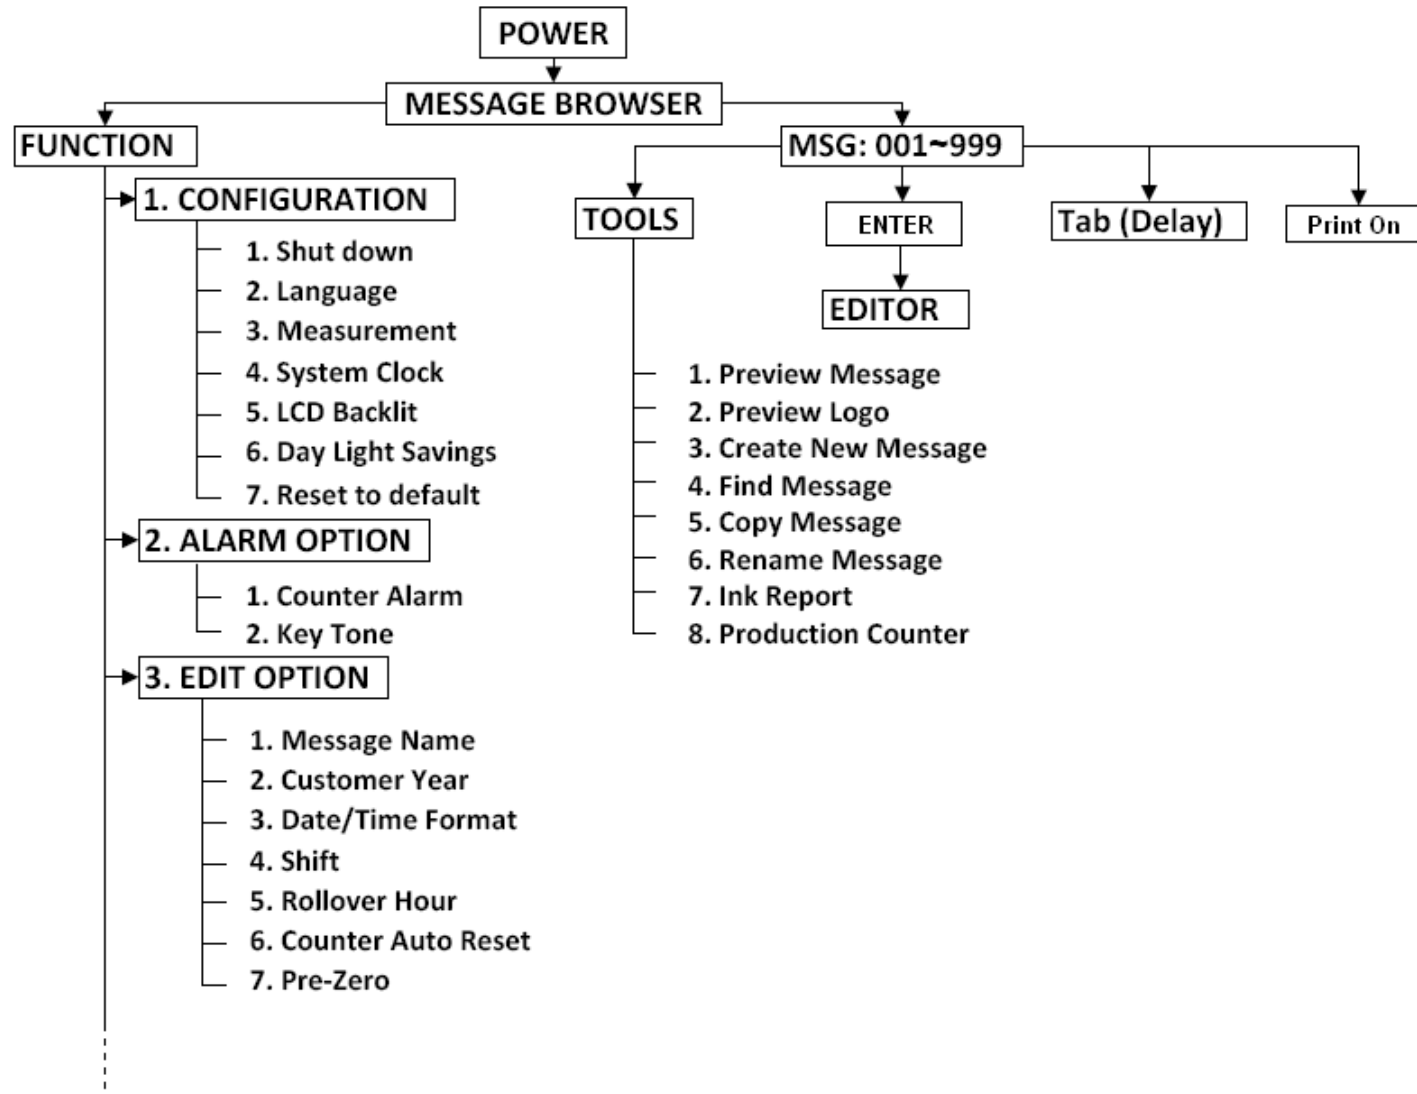

# EASY OPERATION MENU TREE (2)

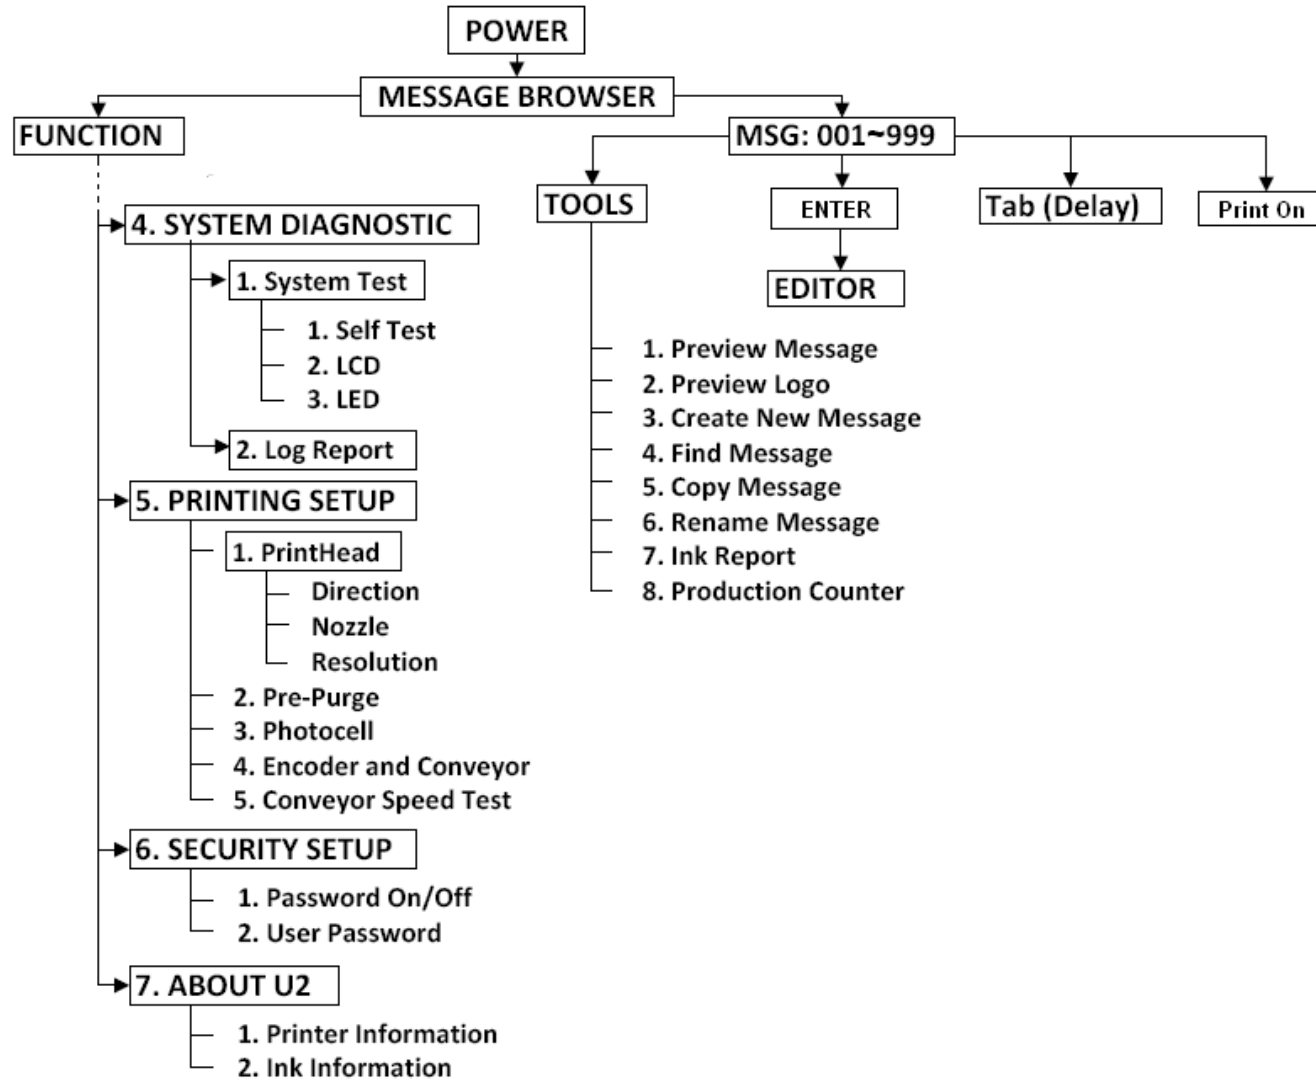

# MESSAGE BROWSER MODE

---

S/N:71196  
10-12-08

---

NO PRINTED MESSAGE





001*	002	003	004	005
006	007	008	009	010

SD

# SET UP – LANGUAGE, MEASUREMENT & SYSTEM CLOCK



---

- a. Press “Function → 1. Configuration → 2. Language”:  
(Setting Language to English)
  
- b. Press “Function → 1. Configuration → 3. Measurement”:  
(Setting Measurement to Inch)
  
- c. Press “Function → 1. Configuration → 4. System Clock”:  
(Setting System clock)

<b>1 CONFIGURATION</b>	<b>1.2 LANGUAGE</b>	<b>1.3 MEASUREMENT</b>	<b>1.4 SYSTEM CLOCK</b>
1. SHUTDOWN 2. LANGUAGE 3. MEASUREMENT 4. SYSTEM CLOCK 5. LCD BACKLITE SAVING 6. DAYLIGHT SAVING 7. RESET TO DEFAULT	ENGLISH	BRITISH <INCH>	Y Y Y Y M M D D h h m m s s 2 0 1 0 1 2 0 9 1 0 0 0 2 1
			

# HOW TO ADJUST PRINT POSITION


Go to the Message Browser Mode. Select the message to be printed, and press “Tab” to set up the printing delay

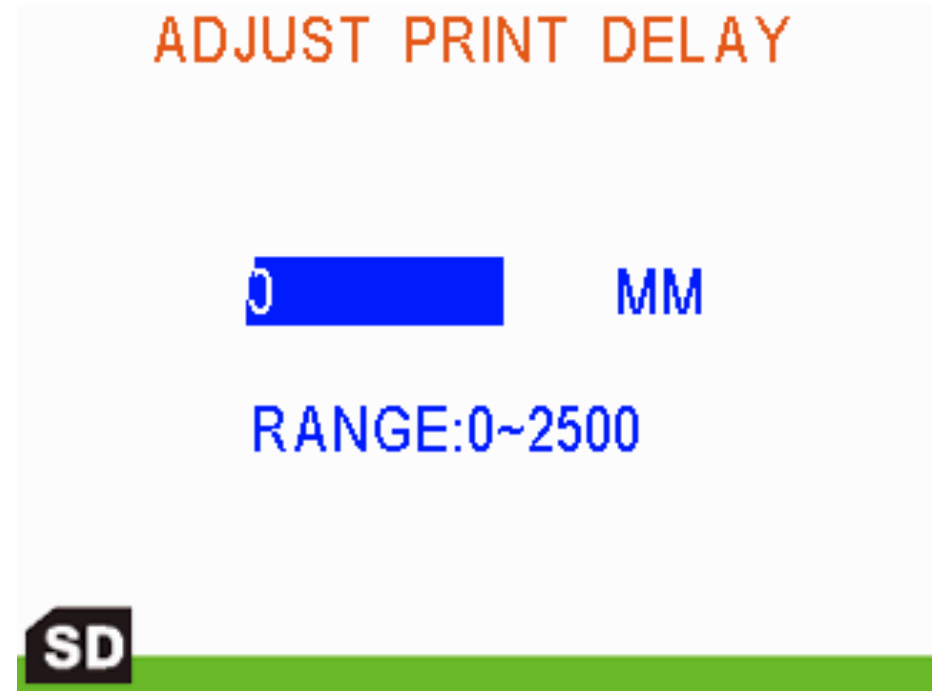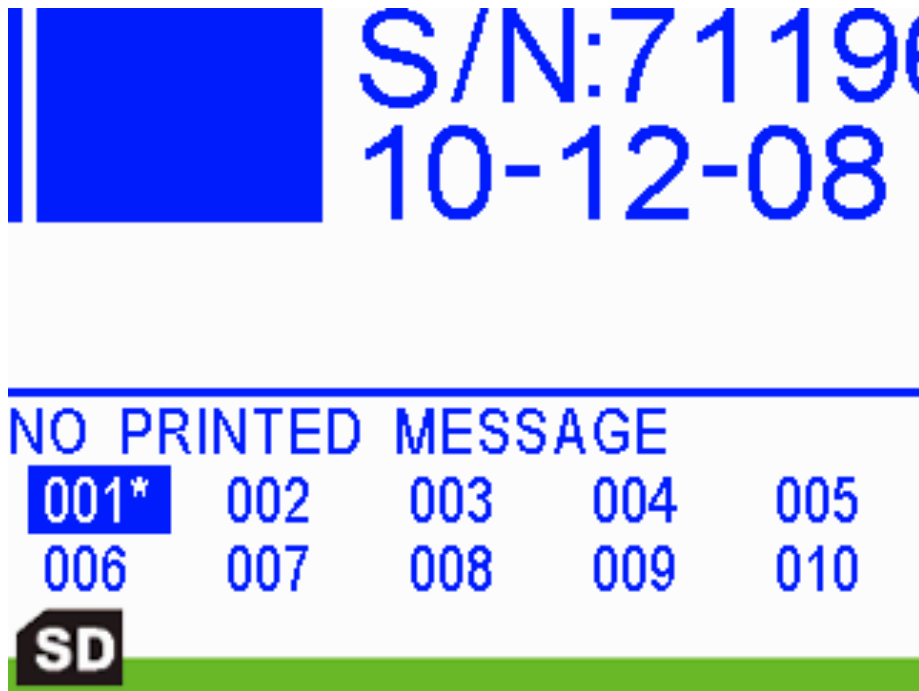

# ENABLING THE PRINTING PROCESS

---

Press "Print On" to start printing

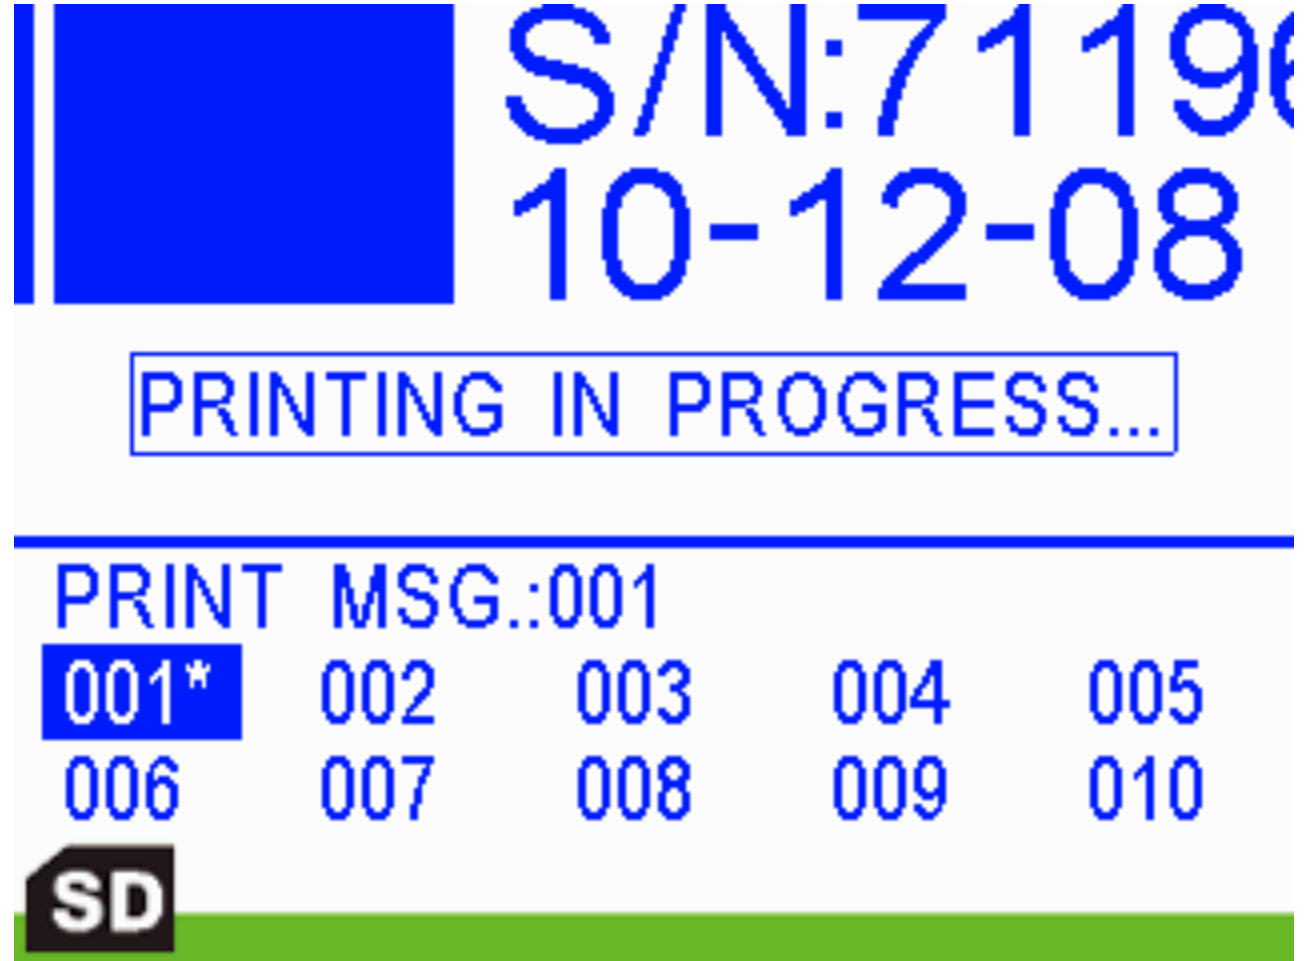



# SYSTEM DIAGNOSTICS

---

Press “Function → 4. System Diagnostics → 1. System Tests → 1. Self Test”:

